

Products

How To Order

Contact Us

Home



## Installation

### Mounting Instructions

Comfit Couplers have a push-lock mechanism, which enables them to be installed on pipes without pre-dismantling



***Do not take the coupler apart unless necessary!***


1. Bevel the pipe edge with Comfit Chamfering tool

End of pipe must be clean and round.

Keep inside of coupler free from sand and mud.



2. Mark insertion depth on the pipe.

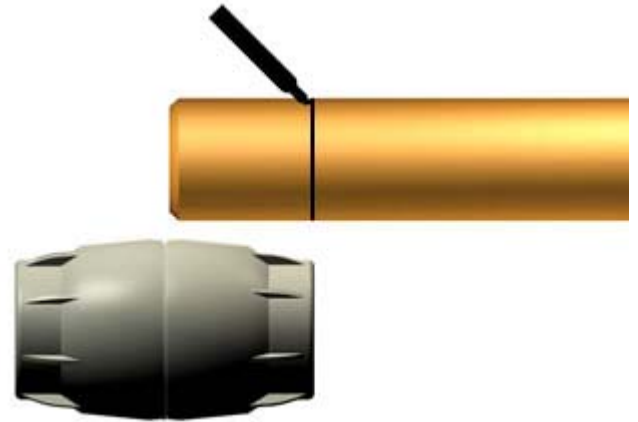

3. Push the coupler on the pipe up to the mark.

After mounting pull the pipe forcibly by hand to ensure correct installation.



5166 Parkmoor Dr. • Westerville, OH 43082 • Toll Free 866-476-4510  
• Local Ph 614-414-0861 • Fax 614-414-0976 • [E-mail](#)

